



neocore® WAVE™ NW™ A2

UK: myneocore.com/waveA2UK
FR: myneocore.com/waveA2UK
DE: myneocore.com/waveA2UK
ES: myneocore.com/waveA2UK
IT: myneocore.com/waveA2UK

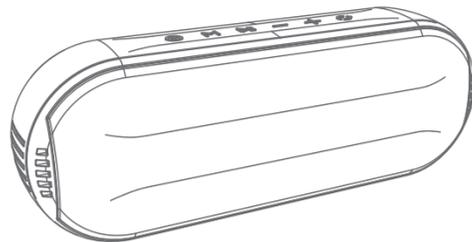

INTRODUCTION >>>

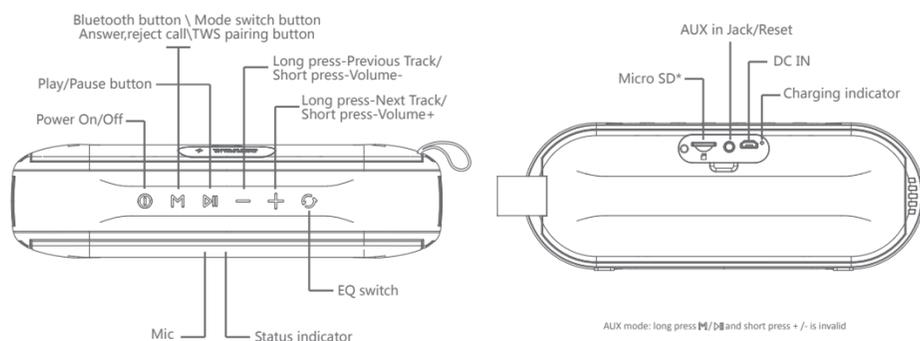

Multifunction Button

1. Bluetooth button : In Bluetooth mode, long press the M button, disconnect the current connection, and the blue indicator light flashes.
2. Mode switch button : Short press the M button, you can switch among Bluetooth /Micro SD /Aux in modes.
3. Answer/reject call button : When the phone rings short press for answering,long press for rejecting call.
4. TWS pairing button : After power on (speaker will be in Bluetooth standby mode,the Blue indicator flashes) long press M for get into TWS pairing mode.

HOW TO CONNECT >>>

- 1 Long press the power on/off button for 3 seconds and WAVE A2 will be in Bluetooth mode, The status led indicator will flash.
- 2 Connect to your device
Setting>Bluetooth>
Choose device> neocore WAVE A2
Connected successfully
The status led indicator will be steady on.

FUNCTIONS >>>

Micro SD Card

1. Support Micro SD max 256 GB.
2. Micro SD support format:MP3,WMA,WAV,FLAC,APE.

Equalize

1. Two kinds of EQ modes : indoor EQ mode(Indoor version: focus on the low and medium frequency), outdoor EQ mode(Outdoor version: more medium and high frequency, louder vocals, greater range of transmission.)
2. By default it will be on the indoor EQ mode , press EQ Switch Button to switching different EQ.
3. The indoor EQ mode prompt "low notification sound" and the outdoor EQ mode prompt "high notification sound".
4. EQ memory mode : speaker will memory the EQ as the last shutdown.

TWS (True Wireless Stereo)

This function is available in Bluetooth mode only. 2 neocore WAVE A1 speakers are required (latest version). You just have to do it once, speakers will save the settings.

1. Turn on both speakers in Bluetooth mode(status indicator flashing blue).
- 2.Press Mode switch button/Answer button for 2 seconds on one of the speakers until you hear a notification sound.
3. Pairing will take up to 10 seconds you'll hear a 'connected' command on the 2nd speaker and status indicator will stop flashing.
4. Connect your Bluetooth device to the master speaker as usual.

When your Bluetooth device is connected to one of the speakers, press switch mode button for 2 seconds to reset the connection and set up the TWS function.

OTHER >>>

Charging

Charging via a computer through a USB cable or buy a USB charger separately.

Indicator

Blue indicator flashes	Status of pairing.
Blue indicator remains steady on	Connected to Bluetooth® source or connected to aux-in/Micro SD Card devices.
Red indicator flashes	Battery voltage lower than 3.4V , Red light flashes means your speaker needs charging.
Red charging indicator on	Red indicator is on when charging , and off when fully charged.

Reset

If the device is not responding , please insert a pin like object into the AUX connector.


Note : Your speaker will power off automatically within 15 minutes if you did not pair it with playback devices in order to save energy.

SPECIFICATIONS >>>

Bluetooth version:	4.2
Driver spec :	Φ52mm 4Ω/8Wx2
Size :	L204.5*W53.5*H75.0 mm
Net weight :	352g +/-5g
Frequency response :	100HZ - 20KHZ
Sensitivity :	80dB
S/N ratio :	≥75dB
Distortion :	≤0.3% @ 1W
Working distance :	about 33 feet/ 10M
Transmission Power :	Class2, ≤4dbm
Bluetooth profiles :	A2DP, AVRCP, HFP
Working current :	≤700mA
Working voltage :	3.3 - 4.2V
Charging voltage :	DC 5V
Charging current :	≤800MA
Battery capacity :	4000 mAh
Static standby current under shutdown status :	≤110 uA
Static standby current under power on status :	≤25mA
Charging time :	about 3 hours
Playtime at full volume :	about 10 hours
Playtime at 60% volume :	about 30 hours
Waterproof :	IPX6

IPX6 : No harm for 3-5 minutes water flushing, but don't soak!

CONTAIN >>>

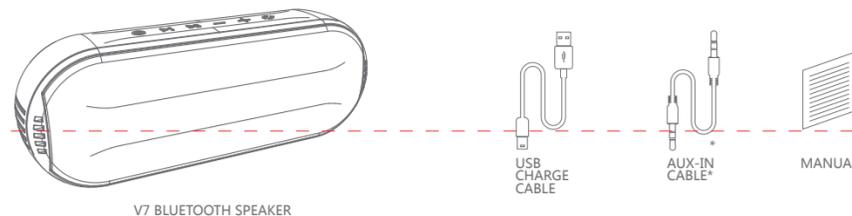

WARRANTY POLICY >>>

Your Bluetooth speaker is covered by a limited warranty. It is backed by 2 year performance warranty against any manufacturing defects in material or workmanship from the date of original purchase. This warranty entitles the purchaser to get the product repaired or replaced under the following conditions:

- The warranty applies to the original purchase, Proof of original purchase is required
- The warranty does not cover the damage caused by misuse, abuse or improper storage.
- In no event shall be responsible for any direct, incidental, consequential or other damages of any kind.

neocore is registered trade mark in the UK and other countries.

Support
www.MyNeocore.com/support

The company reserves the right to the product modification for appearance and function,which is subject to change without prior notice.

OPTIONAL*